

**Before the  
FEDERAL COMMUNICATIONS COMMISSION  
Washington, D.C. 20554**

In the Matter of )  
 )  
Modification and Clarification of )  
Policies and Procedures Governing ) RM-8763  
Siting and Maintenance of Amateur )  
Radio Antennas and Support )  
Structures, and Amendment of )  
Section 97.15 of the Rules )  
Governing the Amateur Radio Service )

To: The Secretary,  
Federal Communications Commission

cc: Chairman William E. Kennard  
Commissioner Susan Ness  
Commissioner Michael Powell  
Commissioner Harold Furchgott-Roth  
Commissioner Gloria Tristani

**COMMENTS OF NO CODE INTERNATIONAL IN SUPPORT OF THE AMERICAN  
RADIO RELAY LEAGUE, INC.'S PETITION FOR RECONSIDERATION**

No Code International ("NCI"), on behalf of its Members and by its Board of Directors,  
hereby submits its Comments in Support of the Petition for Reconsideration filed by the  
American Radio Relay League, Inc. ("ARRL") in the above-captioned proceeding on December  
20, 1999 ("the Petition").

1. NCI is a not-for-profit organization of licensed radio amateurs, as well as those interested in amateur radio, but not yet licensed. NCI was founded in 1997 and is experiencing rapid growth, both within the U.S. and internationally. While NCI has an international membership and global goals with respect to various amateur regulatory matters, a majority of its members are currently U.S. licensed radio amateurs. NCI is an interested party in this proceeding.

2. NCI is very concerned about the adverse effects which the Amateur Radio Service suffers now, and will in all likelihood increasingly suffer in the future, due to the refusal, in the Order, DA-2569, released November 19, 1999 ("the Order") of the Deputy Chief, Wireless Telecommunications Bureau ("WTB"), to extend and clarify the Commission's preemptive authorities and intent as requested in the Petition for Rulemaking in the above-captioned proceeding, which was filed by the ARRL on February 7, 1996.

3. The refusal in the Order by the Deputy Chief of the WTB to amend section 97.15(b) of the Commission's Rules [47 C.F.R. §97.15(b)] to clarify the Commission's preemptive intent in certain respects relative to state and local regulation of amateur radio antennas, as requested by the ARRL in its Petition for Rulemaking, will perpetuate considerable harm on the ARS and will in the future, if not rectified, result in increasing and even more widespread harm to the amateur community's ability to effectively provide the valuable public service and emergency communications services which are an important part of the Basis and Purpose of the ARS, as outlined in section 97.1 of the Commission's Rules [47 C.F.R. §97.15(b)].<sup>1</sup>

---

<sup>1</sup> Part 97.1(a) of the Commission's Rules cites as the **first** of several important components of the regulatory "Basis and Purpose" for the existence of the Amateur Radio Service:

"Recognition ***and enhancement*** (*emphasis added*) of the value of the amateur service to the public as a voluntary noncommercial communication service, particularly with respect to providing emergency communications."

4. As pointed out by the ARRL in the instant Petition for Reconsideration, the delay involved in resolving the issues raised in the original Petition for Rulemaking has resulted in expenditure of large amounts of money in litigation over land use issues; confusion on the part of, and unnecessary conflicts with, land use regulators; and has severely hampered the ability of many licensed radio amateurs to conduct their chartered public service activities.

5. NCI concurs **wholeheartedly** with the **entirety** of Sections II, III, and IV of the ARRL's instant Petition for Reconsideration, **and hereby incorporates each and every assertion and citation contained therein by reference in these Comments.**

6. The inability of amateurs to install and maintain reasonable antenna systems<sup>2</sup> is becoming more and more widespread due to both unreasonable local zoning restrictions and Covenants, Conditions, and Restrictions ("CC&Rs") placed on the deeds to residential properties by developers, which routinely disallow the installation of any and all antennas.

7. It makes no sense for the Commission to take the position that it "has no authority" to preempt CC&Rs "because they are private contractual agreements" when the Commission has, in fact, already exercised such authority, as granted by Congress, in preempting such restrictions on direct broadcast satellite "mini-dishes" and antennae for over-the-air reception devices such as broadcast television and the Multichannel Multipoint Distribution Service ("MMDS").<sup>3</sup>

---

<sup>2</sup> For an excellent summary of what constitutes a "reasonable antenna system" from a technical aspect, as well as some discussion of the misconceptions commonly relied on by local zoning boards in their decisions with respect to antenna height restrictions, the reader is referred to *Antenna Height and Communications Effectiveness – A Guide for City planners and Amateur Radio Operators (Second Edition)*, published by the ARRL, a copy of which is attached hereto as **Appendix A**.

<sup>3</sup> See *In re Preemption of Local Zoning Regulation of Satellite Earth Stations, and In re Implementation of Section 207 of the Telecommunications Act of 1996, Restrictions on Over-The-Air Reception Devices: Television Broadcast Service and Multichannel Multipoint Distribution Service, 11 FCC Rcd. 19276 (1996)*.

8. Unreasonable zoning restrictions and CC&Rs are based primarily on zoning boards', developers', and homeowners associations' senses of aesthetics,<sup>4</sup> fear of radio frequency interference ("RFI") to poorly shielded and filtered consumer electronics devices<sup>5</sup>, and (generally unfounded) concerns about exposure to radio frequency ("RF") energy<sup>6</sup>, rather than on issues of legitimate local regulatory concern and authority and both unreasonable zoning restrictions and CC&Rs should be proactively and effectively preempted by the Commission.

9. If local zoning boards, through unreasonably restrictive regulations or excessive fees; or developers and homeowners associations, by the indiscriminate, blanket prohibition of all forms of antennae through CC&Rs; are permitted to thwart the ability of the Commission's licensees in the ARS to erect and maintain reasonable antenna systems, the public interest will be compromised.

10. NCI believes that the Commission has a public interest obligation, as well as a Congressional mandate, to act to protect the ability of its licensees in the ARS to effectively and fully perform the public service and emergency communications service duties established as one of the Commission's primary regulatory objectives for the ARS.<sup>7</sup>

---

<sup>4</sup> "Aesthetics" carried to the extreme, as practiced by many local zoning boards, developers, and homeowners associations, flies in the face of the Commission's legitimate preemptory interest in assuring that its licensees in the ARS are able to effectively carry out the communications authorized by their licenses.

<sup>5</sup> Had the Commission acted, as requested in the past, to establish rules governing the vulnerability of consumer electronics devices to RF emissions which they were not intended to receive, this concern would not be as prevalent as it is today. However, the area of RF interference is not a legitimate area of local regulatory concern (that area having been reserved to the federal government, as represented by the Commission).

<sup>6</sup> The Commission has also established its authority over RF exposure limits and has promulgated Rules governing permissible RF exposure levels. Indeed, amateurs operating beyond certain power levels are required by the Commission's Rules to conduct an RF safety evaluation according to prescribed methods, and keep records relating thereto.

<sup>7</sup> To reiterate from Part 97.1(a):

"Recognition and enhancement (*emphasis added*) of the value of the amateur service to the public as a voluntary noncommercial communication service, particularly with respect to providing emergency communications."


## Conclusion

NCI agrees with the ARRL that, in this case, the WTB erred in its decisions in the Order denying *in toto* the ARRL's Petition for Rulemaking of February 7, 1996 and that there is ample precedent and legal justification for the Commission to grant the relief requested by the ARRL in its Petition for Reconsideration.

If the Commission allows the Order to stand as is, we believe it will be abdicating its responsibility to the public interest, convenience, and necessity and acting contrary to both its own Basis and Purpose for the ARS as outlined in Part 97.1 of the Commission's Rules and the determination of Congress.<sup>8</sup>

We therefore respectfully join the ARRL in requesting that the Commission reconsider its denial of the ARRL's Petition for Rulemaking and, at the earliest possible time, both clarify its preemption of local zoning regulations and extend such preemptions to CC&Rs and other private land use restrictions as requested therein and specifically authorized by Congress.

Respectfully submitted,  
No-Code International

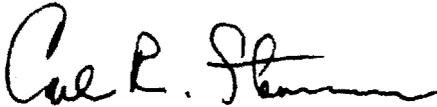

---

Carl R. Stevenson, WA6VSE  
270 West Chestnut Street  
Macungie, PA 18062-1042  
wa6vse@fast.net  
Member of the NCI Board of Directors  
(as delegated and approved by the Board as a whole)

---

<sup>8</sup> Petition for Reconsideration of the ARRL at 6.

## Appendix A

---

---

# **Antenna Height and Communications Effectiveness**

Second Edition

---

*A Guide for City Planners and Amateur Radio Operators*

By R. Dean Straw, N6BV, and Gerald L. Hall, K1TD  
Senior Assistant Technical Editor and Retired Associate Technical Editor

Copyright ©1999  
The American Radio Relay League, Inc.  
225 Main Street  
Newington, CT 06111



# Executive Summary

Amateur radio operators, or “hams” as they are called, communicate with stations located all over the world. Some contacts may be local in nature, while others may be literally halfway around the world. Hams use a variety of internationally allocated frequencies to accomplish their communications.

Except for local contacts, which are primarily made on Very High and Ultra High Frequencies (VHF and UHF), communicating between any two points on the earth rely primarily on high-frequency (HF) signals propagating through the ionosphere. The earth’s ionosphere acts much like a mirror at heights of about 150 miles. The vertical angle of radiation of a signal launched from an antenna is one of the key factors determining effective communication distances. The ability to communicate over long distances generally requires a low radiation angle, meaning that an antenna must be placed high above the ground in terms of the wavelength of the radio wave being transmitted.

A beam type of antenna at a height of 70 feet or more will provide greatly superior performance over the same antenna at 35 feet, all other factors being equal. A height of 120 feet or even higher will provide even more advantages for long-distance communications. To a distant receiving station, a transmitting antenna at 120 feet will provide the effect of approximately 8 to 10 times more transmitting power than the same antenna at 35 feet. Depending on the level of noise and interference, this performance disparity is often enough to mean the difference between making distant radio contact with fairly reliable signals, and being unable to make distant contact at all.

Radio Amateurs have a well-deserved reputation for providing vital communications in emergency situations, such as in the aftermath of a severe icestorm, a hurricane or an earthquake. Short-range communications at VHF or UHF frequencies also require sufficient antenna heights above the local terrain to ensure that the antenna has a clear horizon.

In terms of safety and aesthetic considerations, it might seem intuitively reasonable for a planning board to want to restrict antenna installations to low heights. However, such height restrictions often prove very counterproductive and frustrating to all parties involved. If an amateur is restricted to low antenna heights, say 35 feet, he will suffer from poor transmission of his own signals as well as poor reception of distant signals. In an attempt to compensate on the transmitting side (he can’t do anything about the poor reception problem), he might boost his transmitted power, say from 150 watts to 1,500 watts, the maximum legal limit. This ten-fold increase in power will very significantly increase the *potential* for interference to telephones, televisions, VCRs and audio equipment in his neighborhood.

Instead, if the antenna can be moved farther away from neighboring electronic devices—putting it higher, in other words—this will greatly reduce the likelihood of interference, which decreases at the inverse square of the distance. For example, doubling the distance reduces the potential for interference by 75%. As a further benefit, a large antenna doesn’t look anywhere near as large at 120 feet as it does close-up at 35 feet.

As a not-so-inconsequential side benefit, moving an antenna higher will also greatly reduce the potential of exposure to electromagnetic fields for neighboring human and animals. Interference and RF exposure standards have been thoroughly covered in recently enacted Federal Regulations.

# Antenna Height and Communications Effectiveness

By R. Dean Straw, N6BV, and Gerald L. Hall, K1TD  
Senior Assistant Technical Editor and Retired Associate Technical Editor

The purpose of this paper is to provide general information about communications effectiveness as related to the physical height of antennas. The intended audience is amateur radio operators and the city and town Planning Boards before which a radio amateur must sometimes appear to obtain building permits for radio towers and antennas.

The performance of horizontally polarized antennas at heights of 35, 70 and 120 feet is examined in detail. Vertically polarized arrays are not considered here because at short-wave frequencies, over average terrain and at low radiation angles, they are usually less effective than horizontal antennas.

## Ionospheric Propagation

Frequencies between 3 and 30 megahertz (abbreviated MHz) are often called the “short-wave” bands. In engineering terms this range of frequencies is defined as the *high-frequency* or *HF* portion of the radio spectrum. HF radio communications between two points that are separated by more than about 15 to 25 miles depend almost solely on propagation of radio signals through the *ionosphere*. The ionosphere is a region of the Earth’s upper atmosphere that is ionized primarily by ultraviolet rays from the Sun.


The Earth’s ionosphere has the property that it will refract or bend radio waves passing through it. The ionosphere is not a single “blanket” of ionization. Instead, for a number of complex reasons, a few discrete layers are formed at different heights above the earth. From the standpoint of radio propagation, each ionized layer has distinctive characteristics, related primarily to different amounts of ionization in the various layers. The ionized layer that is most useful for HF radio communication is called the *F layer*.

The F layer exists at heights varying from approximately 130 to 260 miles above the earth’s surface. Both the layer height and the amount of ionization depend on the latitude from the equator, the time of day, the season of the year, and on the level of sunspot activity. Sunspot activity varies generally in cycles that are approximately 11 years in duration, although short-term bursts of activity may create changes in propagation conditions that last anywhere from a few minutes to several days. The ionosphere is not homogeneous, and is undergoing continual change. In fact, the exact state of the ionosphere at any one time is so variable that is best described in statistical terms.

The F layer disappears at night in periods of low and medium solar activity, as the ultraviolet energy required to sustain ionization is no longer received from the Sun. The amount that a passing radio wave will bend in an ionospheric layer is directly related to the intensity of ionization in that layer, and to the frequency of the radio wave.


A triangle may be used to portray the cross-sectional path of ionospheric radio-wave travel, as shown in **Fig 1**, a highly simplified picture of what happens in propagation of radio waves. The base of the triangle is the surface of the Earth between two distant points, and the apex of the triangle is the point representing refraction in the ionosphere. If all the necessary conditions are

met, the radio wave will travel from the first point on the Earth's surface to the ionosphere, where it will be bent (*refracted*) sufficiently to travel to the second point on the earth, many hundreds of miles away.

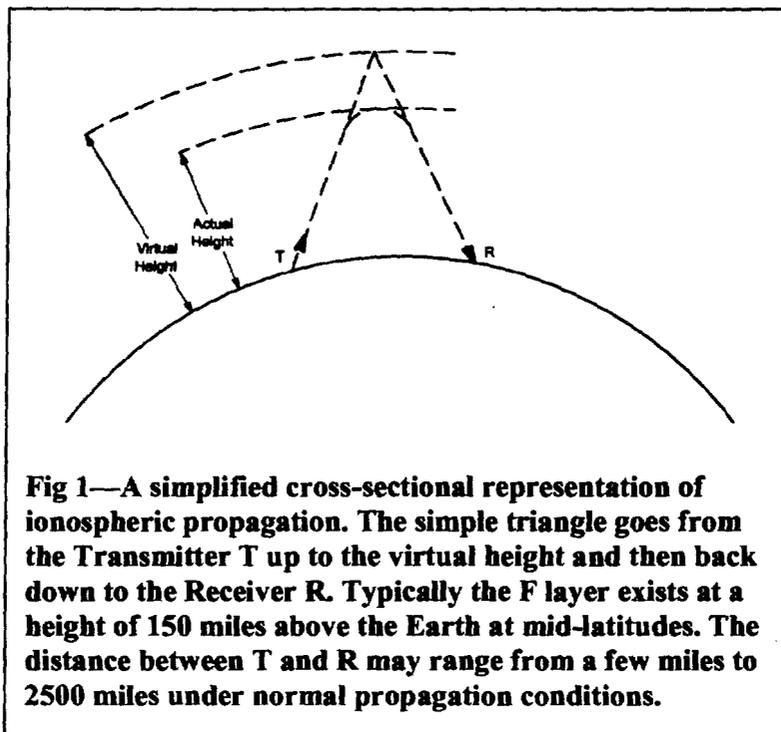

Of course the Earth's surface is not a flat plane, but instead is curved. High-frequency radio waves behave in essentially the same manner as light waves—they tend to travel in straight lines, but with a slight amount of downward bending caused by refraction in the air. For this reason it is not possible to communicate by a direct path over distances greater than about 15 to 25 miles in this frequency range, slightly farther than the optical horizon. The curvature of the earth causes the surface to "fall away" from the path of the radio wave with greater distances. Therefore, it is the ionosphere that permits HF radio communications to be made between points separated by hundreds or even thousands of miles. The range of frequencies from 3 to 30 MHz is unique in this respect, as ionospheric propagation is not consistently supported for any frequencies outside this range.

One of the necessary conditions for ionospheric communications is that the radio wave must encounter the ionosphere at the correct angle. This is illustrated in Fig 2, another very simplified drawing of the geometry involved. Radio waves leaving the earth at high elevation angles above the horizon may receive only very slight bending due to refraction, and are then lost to outer space. For the same fixed frequency of operation, as the elevation angle is lowered toward the horizon, a point is reached where the bending of the wave is sufficient to return the wave to the Earth. At successively lower angles, the wave returns to the Earth at increasing distances.

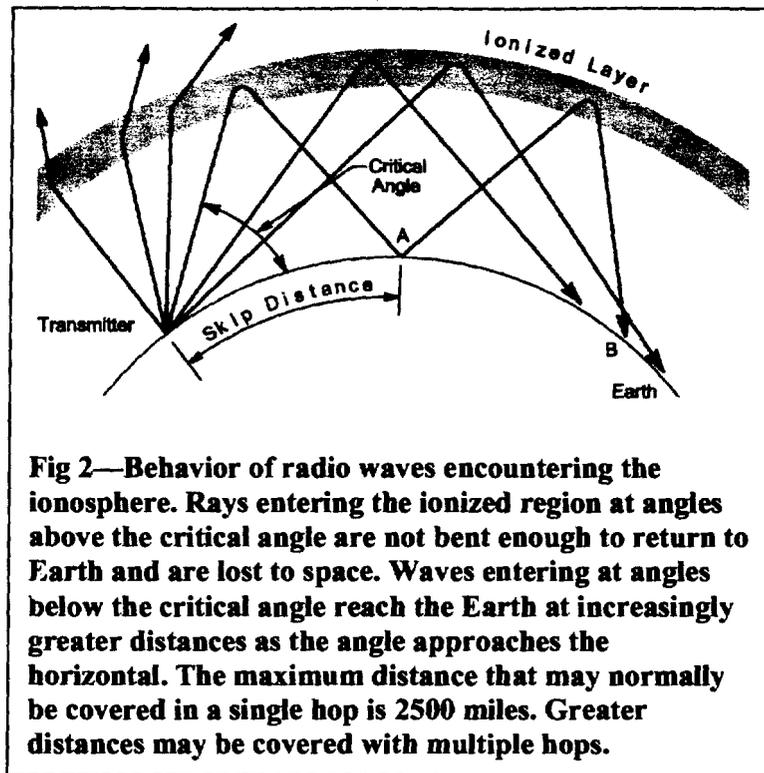

If the radio wave leaves the earth at an *elevation angle* of zero degrees, just toward the horizon (or just tangent to the earth's surface), the maximum distance that may be reached under usual ionospheric conditions is approximately 2,500 miles (4,000 kilometers). However, the Earth itself also acts as a reflector of radio waves coming down from the ionosphere. Quite often a radio signal will be reflected from the reception point on the Earth back into the ionosphere again, reaching the Earth a second time at a still more distant point.

As in the case of light waves, the angle of reflection is the same as the angle of incidence, so a wave striking the surface of the Earth at an angle of, say,  $15^\circ$  is reflected upward from the surface at the same angle. Thus, the distance to the second point of reception will be approximately twice the distance of the first. This effect is also illustrated in Fig 2, where the signal travels from the transmitter at the left of the drawing via the ionosphere to Point A, in the center of the drawing. From Point A the signal travels via the ionosphere again to Point B, at the right. A signal traveling from the Earth through the ionosphere and back to the Earth is called a *hop*. Under some conditions it is possible for as many as four or five signal hops to occur over a radio path, but no more than two or three hops is the norm. In this way, HF communications can be conducted over thousands of miles.

With regard to signal hopping, two important points should be recognized. First, a significant loss of signal occurs with each hop. Lower layers of the ionosphere absorb energy from the signals as they pass through, and the ionosphere tends to scatter the radio energy in various directions, rather than confining it to a tight bundle. The earth also scatters the energy at a reflection point. Thus, only a small fraction of the transmitted energy actually reaches a distant receiving point.

Again refer to Fig 2. Two radio paths are shown from the transmitter to Point B, a one-hop path and a two-hop path. Measurements indicate that although there can be great variation in the ratio of the two signal strengths in a situation such as this, the signal power received at Point B will generally be from five to ten times greater for the one-hop wave than for the two-hop wave. (The terrain at the mid-path reflection point for the two-hop wave, the angle at which the wave is reflected from the earth, and the condition of the ionosphere in the vicinity of all the refraction points are the primary factors in determining the signal-strength ratio.) Signal levels are generally compared in decibels, abbreviated dB. The decibel is a logarithmic unit. Three decibels difference in signal strengths is equivalent to a power ratio of 2:1; a difference of 10 dB equates to a power ratio of 10:1. Thus the signal loss for an additional hop is about 7 to 10 dB.

The additional loss per hop becomes significant at greater distances. For a simplified example, a distance of 4,000 miles can be covered in two hops of 2,000 miles each or in four hops of 1,000 miles each. For illustration, assume the loss for additional hops is 10 dB, or a 1/10 power ratio. Under such conditions, the four-hop signal will be received with only 1/100 the power or 20 dB below that received in two hops. The reason for this is that only 1/10 of the two-hop signal is received for the first additional (3<sup>rd</sup>) hop, and only 1/10 of that 1/10 for the second additional (4<sup>th</sup>) hop. It is for this reason that no more than four or five propagation hops are useful; the received signal eventually becomes too weak to be heard.

The second important point to be recognized in multihop propagation is that the geometry of the first hop establishes the geometry for all succeeding hops. And it is the elevation angle at the transmitter that sets up the geometry for the first hop.

It should be obvious from the preceding discussion that one needs a detailed knowledge of the range of elevation angles for effective communication in order to do a scientific evaluation of a possible communications circuit. The range of angles should be statistically valid over the full 11-year solar sunspot cycle, since the behavior of the Sun determines the changes in the nature of the Earth's ionosphere. ARRL did a very detailed computer study in the early 1990s to determine the angles needed for propagation throughout the world. The results of this study will be examined later, after we introduce the relationship between antenna height and the elevation pattern for an antenna.

### **Horizontal Antennas Over Flat Ground**


A simple antenna that is commonly used for HF communications is the horizontal half-wave *dipole*. The dipole is a straight length of wire (or tubing) into which radio-frequency energy is fed at the center. Because of its simplicity, the dipole may be easily subjected to theoretical performance analyses. Further, the results of proper analyses are well borne out in practice. For these reasons, the half-wave dipole is a convenient performance standard against which other antenna systems can be compared.

Because the earth acts as a reflector for HF radio waves, the directive properties of any antenna are modified considerably by the ground underneath it. If a dipole antenna is placed horizontally above the ground, most of the energy radiated downward from the dipole is

reflected upward. The reflected waves combine with the direct waves (those radiated at angles above the horizontal) in various ways, depending on the height of the antenna, the frequency, and the electrical characteristics of the ground under and around the antenna.

At some vertical angles above the horizon, the direct and reflected waves may be exactly in phase—that is, the maximum signal or field strengths of both waves are reached at the same instant at some distant point. In this case the resultant field strength is equal to the sum of the two components. At other vertical angles the two waves may be completely out of phase at some distant point—that is, the fields are maximum at the same instant but the phase directions are opposite. The resultant field strength in this case is the difference between the two. At still other angles the resultant field will have intermediate values. Thus, the effect of the ground is to increase the intensity of radiation at some vertical angles and to decrease it at others. The elevation angles at which the maxima and minima occur depend primarily on the antenna height above ground. (The electrical characteristics of the ground have some slight effect too.)

For simplicity here, we consider the ground to be a perfectly conducting, perfectly flat reflector, so that straightforward trigonometric calculations can be made to determine the relative amount of radiation intensity at any vertical angle for any dipole height. Graphs from such calculations are often plotted on rectangular axes to show best resolution over particularly useful ranges of elevation angles, although they are also shown on polar plots so that both the front and back of the response can be examined easily. Fig 3 shows an overlay of the polar elevation-pattern responses of two dipoles at different heights over perfectly conducting flat ground. The lower dipole is located a half wavelength above ground, while the higher dipole is located one wavelength above ground. The pattern of the lower antenna peaks at an elevation angle of about  $30^\circ$ , while the higher antenna has two main lobes, one peaking at  $15^\circ$  and the other at about  $50^\circ$  elevation angle.

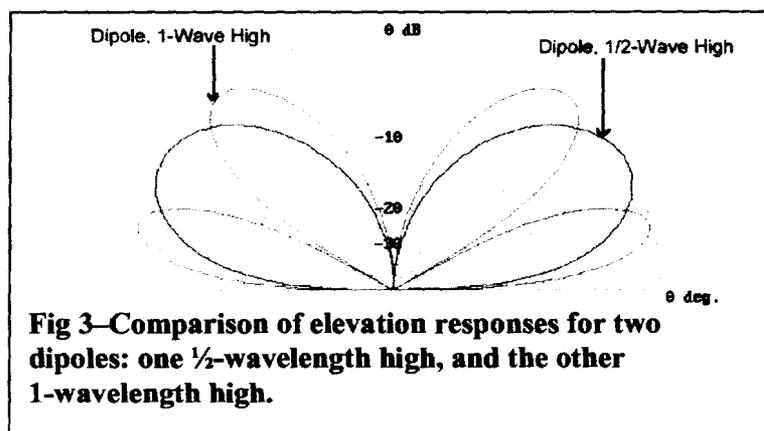

In the plots shown in Fig 3, the elevation angle above the horizon is represented in the same fashion that angles are measured on a protractor. The concentric circles are calibrated to represent ratios of field strengths, referenced to the strength represented by the outer circle. The circles are calibrated in decibels. Diminishing strengths are plotted toward the center.

You may have noted that antenna heights are often discussed in terms of *wavelengths*. The reason for this is that the length of a radio wave is inversely proportional to its frequency. Therefore a fixed physical height will represent different electrical heights at different radio frequencies. For example, a height of 70 feet represents one wavelength at a frequency of 14 MHz. But the same 70-foot height represents a half wavelength for a frequency of 7 MHz and only a quarter wavelength at 3.5 MHz. On the other hand, 70 feet is 2 wavelengths high at 28 MHz.

The lobes and nulls of the patterns shown in Fig 3 illustrate what was described earlier, that the effect of the ground beneath an antenna is to increase the intensity of radiation at some vertical elevation angles and to decrease it at others. At a height of a half wavelength, the radiated energy is strongest at a rather high elevation angle of 30°. This would represent the situation for a 14-MHz dipole 35 feet off the ground.

As the horizontal antenna is raised to greater heights, additional lobes are formed, and the lower ones move closer to the horizon. The maximum amplitude of each of the lobes is roughly equal. As may be seen in Fig 3, for an antenna height of one wavelength, the energy in the lowest lobe is strongest at 15°. This would represent the situation for a 14-MHz dipole 70 feet high.

The elevation angle of the lowest lobe for a horizontal antenna above perfectly conducting ground may be determined mathematically:

$$\theta = \sin^{-1}\left(\frac{0.25}{h}\right)$$

Where

$\theta$  = the wave or elevation angle

$h$  = the antenna height above ground in wavelengths

In short, the higher the horizontal antenna, the lower is the lowest lobe of the pattern. As a very general rule of thumb, the higher an HF antenna can be placed above ground, the farther it will provide effective communications because of the resulting lower radiation angle. This is true for any horizontal antenna over real as well as theoretically perfect ground.

You should note that the *nulls* in the elevation pattern can play an important role in communications—or lack of communication. If a signal arrives at an angle where the antenna system exhibits a deep null, communication effectiveness will be greatly reduced. It is thus quite possible that an antenna can be *too high* for good communications efficiency on a particular frequency. Although this rarely arises as a significant problem on the amateur bands below 14 MHz, we'll discuss the subject of optimal height in more detail later.

Actual earth does not reflect all the radio-frequency energy striking it; some absorption takes place. Over real earth, therefore, the patterns will be slightly different than those shown in Fig 3, however the differences between theoretical and perfect earth ground are not significant for the range of elevation angles necessary for good HF communication. Modern computer programs can do accurate evaluations, taking all the significant ground-related factors into account.

### *Beam Antennas*

For point-to-point communications, it is beneficial to concentrate the radiated energy into a beam that can be aimed toward a distant point. An analogy can be made by comparing the light

from a bare electric bulb to that from an automobile headlight, which incorporates a built-in focusing lens. For illuminating a distant point, the headlight is far more effective.

Antennas designed to concentrate the radiated energy into a beam are called, naturally enough, *beam antennas*. For a fixed amount of transmitter power fed to the transmitting antenna, beam antennas provide increased signal strength at a distant receiver. In radio communications, the use of a beam antenna is also beneficial during reception, because the antenna pattern for transmission is the same for reception. A beam antenna helps to reject signals from unwanted directions, and in effect boosts the strength of signals received from the desired direction.

The increase in signal or field strength a beam antenna offers is frequently referenced to a dipole antenna in free space (or to another theoretical antenna in free space called an *isotropic antenna*) by a term called *gain*. Gain is commonly expressed in decibels. The isotropic antenna is defined as being one that radiates equally well in all directions, much like the way a bare lightbulb radiates essentially equally in all directions.

One particularly well known type of beam antenna is called a *Yagi*, named after one of its Japanese inventors. Different varieties of Yagi antennas exist, each having somewhat different characteristics. Many television antennas are forms of multi-element Yagi beam antennas. In the next section of this paper, we will refer to a four-element Yagi, with a gain of 8.5 dBi in free space, exclusive of any influence due to ground.


This antenna has 8.5 dB more gain than an isotropic antenna in free space and it achieves that gain by squeezing the pattern in certain desired directions. Think of a normally round balloon and imagine squeezing that balloon to elongate it in one direction. The increased length in one direction comes at the expense of length in other directions. This is analogous to how an antenna achieves more signal strength in one direction, at the expense of signal strength in other directions.

The elevation pattern for a Yagi over flat ground will vary with the electrical height over ground in exactly the same manner as for a simpler dipole antenna. The Yagi is one of the most common antennas employed by radio amateurs, second in popularity only to the dipole.

### **Putting the Pieces Together**

In Fig 4, the elevation angles necessary for communication from a particular transmitting site, in Boston, Massachusetts, to the continent of Europe using the 14-MHz amateur band are shown in the form of a bargraph. For each elevation angle from 1° to 30°, Fig 4 shows the percentage of time when the 14-MHz band is open at each elevation angle. For example, 5° is the elevation angle that occurs just over 12% of the time when the band is available for communication, while 11° occurs about 10% of the time when the band is open. The useful range of elevation angles that must be accommodated by an amateur station wishing to talk to Europe from Boston is from 1° to 28°.


In addition to the bar-graph elevation-angle statistics shown in Fig 4, the elevation pattern responses for three Yagi antennas, located at three different heights above flat ground, are overlaid on the same graph. You can easily see that the 120-foot antenna is the best antenna to cover the most likely angles for this particular frequency, although it suffers at the higher elevation angles on this particular propagation path, beyond about 12°. If, however, you can accept somewhat lower gain at the lowest angles, the 70-foot antenna would arguably be the best overall choice to cover all the elevation angles.

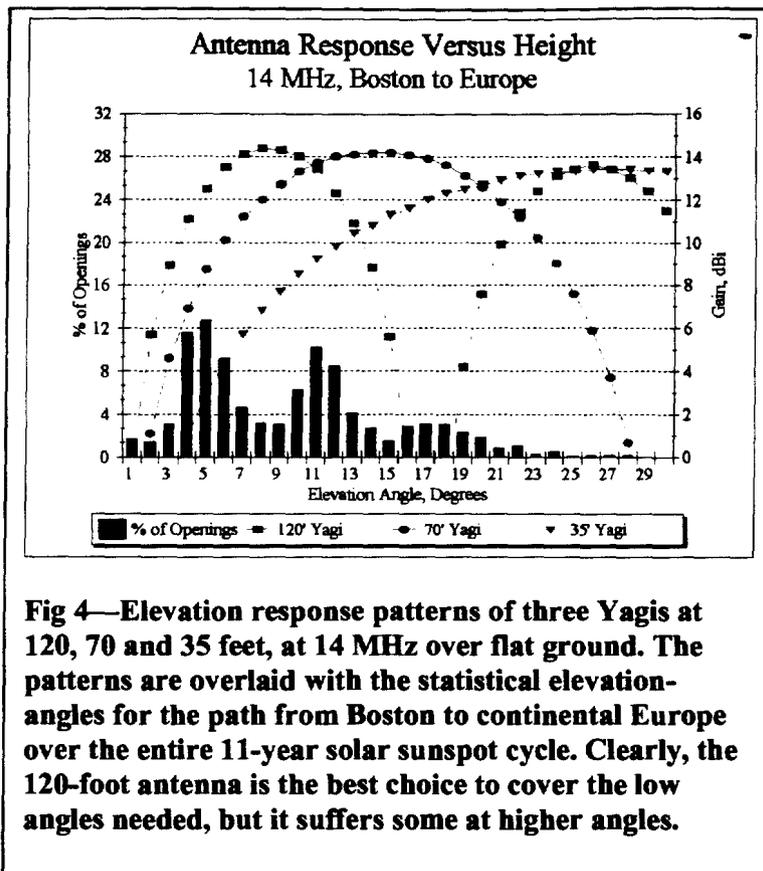


Other graphs are needed to show other target receiving areas around the world. For comparison, Fig 5 is also for the 14-MHz band, but this time from Boston to Sydney, Australia. The peak angle for this very long path is about 2°, occurring 19% of the time when the band is actually open for communication. Here, even the 120-foot high antenna is not ideal. Nonetheless, at a moderate 5° elevation angle, the 120-foot antenna is still 10 dB better than the one at 35 feet.

Fig 4 and Fig 5 have portrayed the situation for the 14-MHz amateur band, the most popular and heavily utilized HF band used by radio amateurs. During medium to high levels of solar sunspot activity, the 21 and 28-MHz amateur bands are open during the daytime for long-distance communication. Fig 6 illustrates the 28-MHz elevation-angle statistics, compared to the elevation patterns for the same three antenna heights shown in Fig 5. Clearly, the elevation response for the 120-foot antenna has a severe (and undesirable) null at 8°. The 120-foot antenna is almost 3.4 wavelengths high on 28 MHz (whereas it is 1.7 wavelengths high on 14 MHz.) For many launch angles, the 120-foot high Yagi on 28 MHz would simply be too high.

The radio amateur who must operate on a variety of frequencies might require two or more towers at different heights to maintain essential elevation coverage on all the authorized bands. Antennas can sometimes be mounted at different heights on a single supporting tower, although it is more difficult to rotate antennas that are “vertically stacked” around the tower to point in all the needed directions. Further, closely spaced antennas tuned to different frequencies usually interact electrically with each other, often causing severe performance degradation.

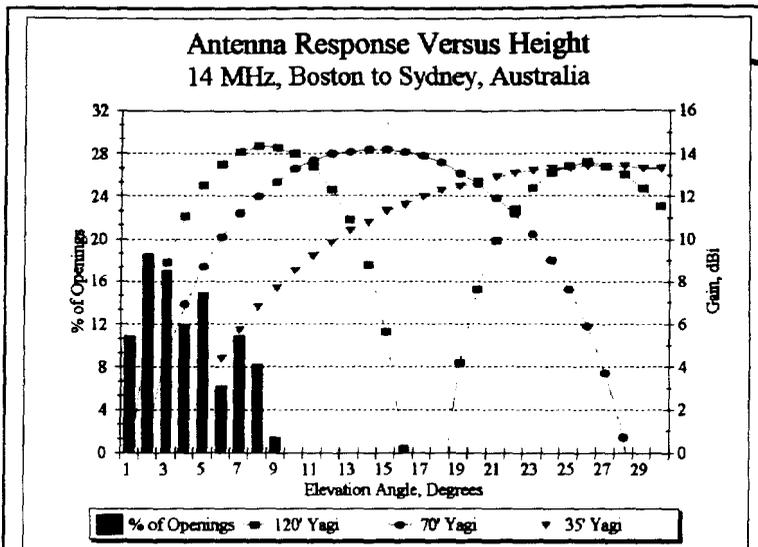


**Fig 5—Elevation responses for same antennas as Fig 4, but for a longer-range path from Boston to Sydney, Australia. Note that the prevailing elevation angles are very low.**

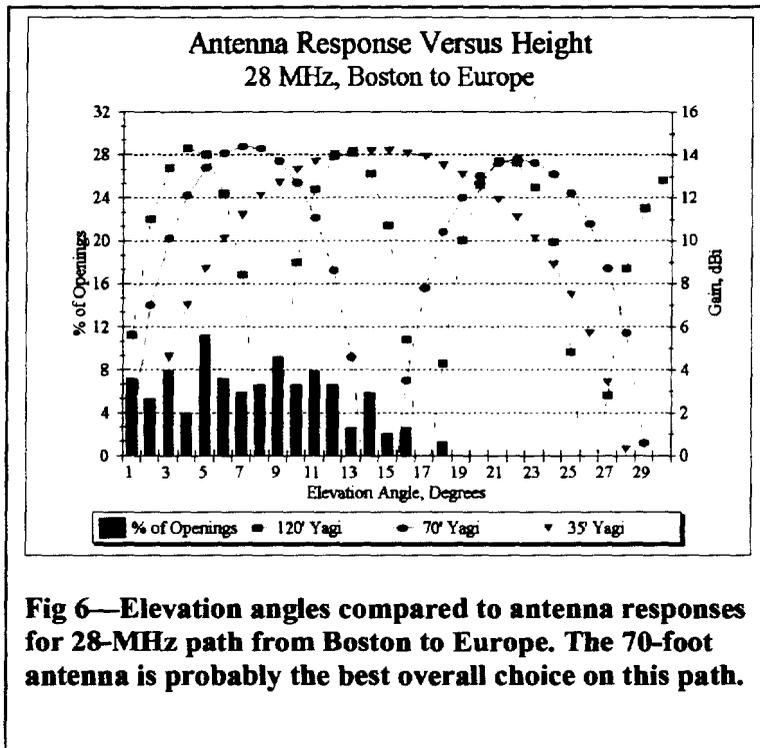

**Fig 6—Elevation angles compared to antenna responses for 28-MHz path from Boston to Europe. The 70-foot antenna is probably the best overall choice on this path.**


During periods of low to moderate sunspot activity (about 50% of the 11-year solar cycle), the 14-MHz band closes down for propagation in the early evening. A radio amateur wishing to continue communication must shift to a lower frequency band. The next most highly used band below the 14-MHz band is the 7-MHz amateur band. Fig 7 portrays a 7-MHz case for another transmitting site, this time from San Francisco, California, to the European continent. Now, the range of necessary elevation angles is from about 1° to 16°, with a peak statistical likelihood of about 16% occurring at an elevation of 3°. At this low elevation angle, a 7-MHz antenna must be very high in the air to be effective. Even the 120-foot antenna is hardly optimal for the peak angle of 3°. The 200-foot antenna shown would be far better than a 120-foot antenna. Further, the 35-foot high antenna is *greatly* inferior to the other antennas on this path and would provide far less capabilities, on both receiving and transmitting.

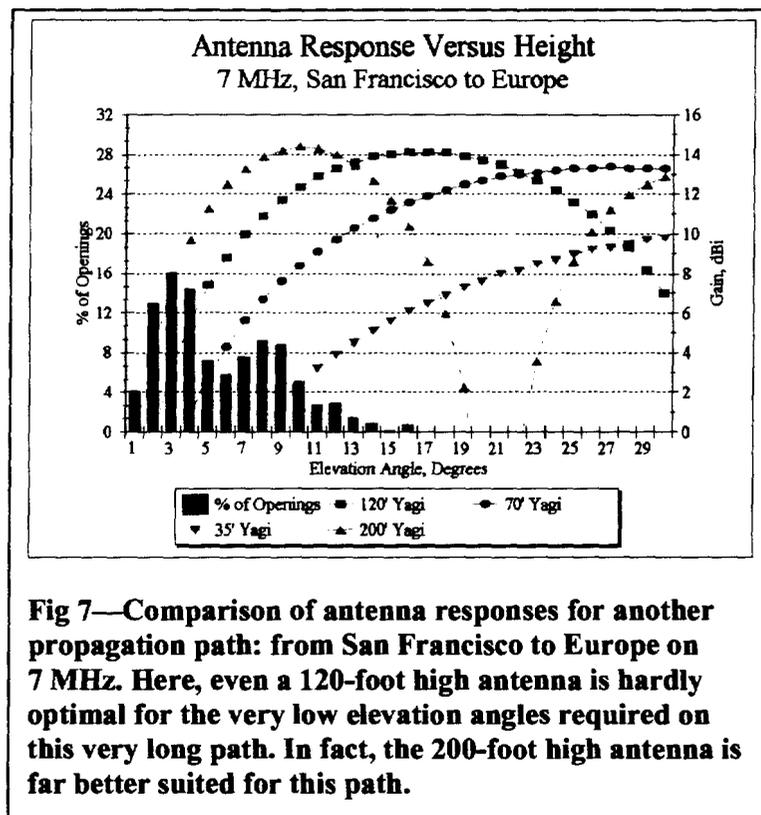

### What If the Ground Isn't Flat?

In the preceding discussion, antenna radiation patterns were computed for antennas located over *flat ground*. Things get much more complicated when the exact local terrain surrounding a tower and antenna are taken into account. In the last few years, sophisticated ray-tracing computer models have become available that can calculate the effect that local terrain has on the elevation patterns for real-world HF installations—and *each* real-world situation is indeed different.

For simplicity, first consider an antenna on the top of a hill with a constant slope downward. The general effect is to lower the effective elevation angle by an amount equal to the downslope of the hill. For example, if the downslope is  $-3^\circ$  for a long distance away from the tower and the flat-ground peak elevation angle is  $10^\circ$  (due to the height of the antenna), then the net result will be  $10^\circ - 3^\circ = 7^\circ$  peak angle. However, if the local terrain is rough, with many bumps and valleys in the desired direction, the response can be modified considerably. Fig 8 shows the fairly complicated terrain profile for Jan Carman, K5MA, in the direction of Japan. Jan is located on one of the tallest hills in West Falmouth, Massachusetts. Within 500 feet of his tower is a small hill with a water tower on the top, and then the ground quickly falls away, so that at a distance of about 3000 feet from the tower base, the elevation has fallen to sea level, at 0 feet.

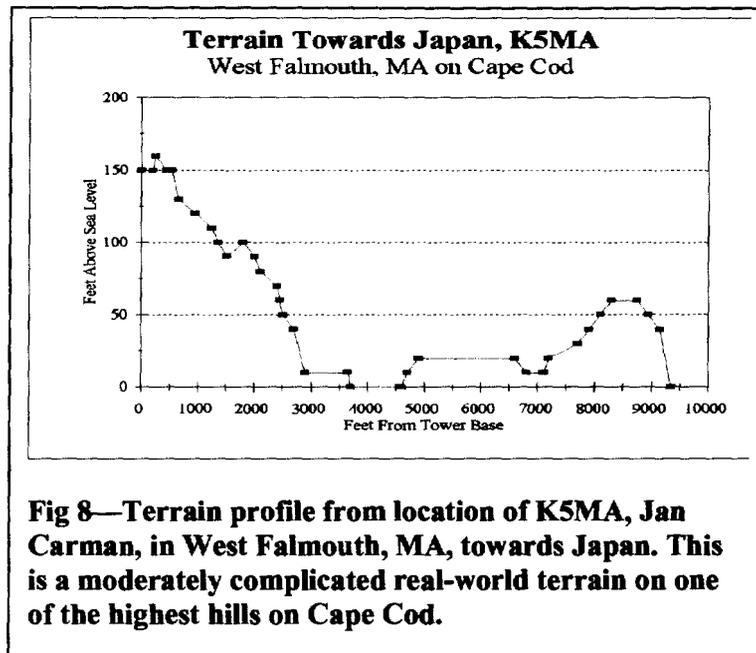

The computed responses toward Japan from this location, using a 120- and a 70-foot high Yagi, are shown in Fig 9, overlaid for comparison with the response for a 120-foot Yagi over flat ground. Over this particular terrain, the elevation pattern for the 70-foot antenna is actually better than that of the 120-foot antenna for angles below about  $3^\circ$ , but not for medium angles! The responses for each height oscillate around the pattern for flat ground— all due to the complex reflections and diffractions occurring off the terrain.

At an elevation angle of  $5^\circ$ , the situation reverses itself and the gain is now higher for the 120-foot-high antenna than for the 70-foot antenna. A pair of antennas on one tower would be required to cover all the angles properly. To avoid any electrical interactions between similar antennas on one tower, two towers would be much better. Compared to the flat-ground situation, the responses of real-world antenna can be very complicated due to the interactions with the local terrain.


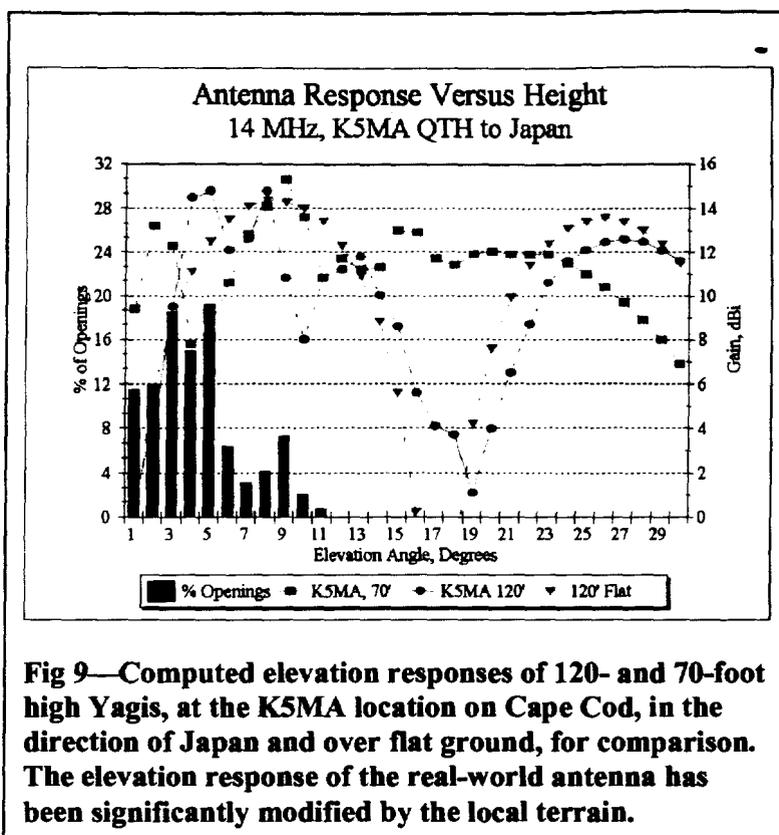


Fig 10 shows the situation for the same Cape Cod location, but now for 7 MHz. Again, it is clear that the 120-foot high Yagi is superior by at least 3 dB (equivalent to twice the power) to the 70-foot high antenna at the statistical elevation angle of 6°. However, the response of the real-world 120-foot high antenna is still up some 2 dB from the response for an identical antenna over flat ground at this angle. On this frequency, the local terrain has helped boost the gain at the medium angles more than a similar antenna 120 feet over flat ground. The gain is even greater at lower angles, say at 1° elevation, where most signals take off, statistically speaking. Putting the antenna up higher, say 150 feet, will help the situation at this location, as would adding an additional Yagi at the 70-foot level and feeding both antennas in phase as a vertical stack.

Although the preceding discussion has been in terms of the transmitting antenna, the same principles apply when the antenna is used for reception. A high antenna will receive low-angle signals more effectively than will a low antenna. Indeed, amateur operators know very well that “If you can’t hear them, you can’t talk to them.” Stations with tall towers can usually hear far better than their counterparts with low installations.

The situation becomes even more difficult for the next lowest amateur band at 3.5 MHz, where optimal antenna heights for effective long-range communication become truly heroic! Towers that exceed 120 feet are commonplace among amateurs wishing to do serious 3.5-MHz long-distance work.

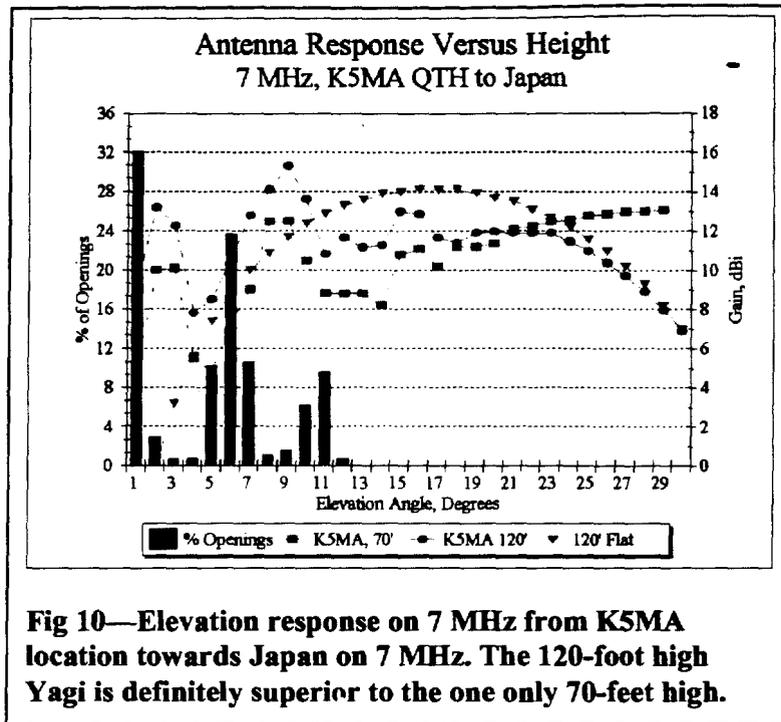

The 3.5 and 7-MHz amateur bands are, however, not always used strictly for long-range work. Both bands are crucial for providing communications throughout a local area, such as might be necessary in times of a local emergency. For example, earthquakes, tornadoes and hurricanes have often disrupted local communications—because telephone and power lines are down and because local police and fire-department VHF/UHF repeaters are thus knocked out of action. Radio amateurs often will use the 3.5 and 7-MHz bands to provide communications out beyond the local area affected by the disaster, perhaps into the next county or the next metropolitan area. For example, an earthquake in San Francisco might see amateurs using emergency power providing communications through amateurs in Oakland across the San Francisco Bay, or even as far away as Los Angeles or Sacramento. These places are where commercial power and telephone lines are still intact, while most power and telephones might be down in San Francisco itself. Similarly, a hurricane that selectively destroys certain towns on Cape Cod might find amateurs in these towns using 3.5 or 7.0 MHz to contact their counterparts in Boston or New York.

However, in order to get the emergency messages through, amateurs must have effective antennas. Most such relatively local emergency situations require towers of moderate height, less than about 100 feet tall typically.

### Antenna Height and Interference

Extensive Federal Regulations cover the subject of interference to home electronic devices. It is an unfortunate fact of life, however, that many home electronic devices (such as stereos, TVs, telephones and VCRs) do not meet the Federal standards. They are simply inadequately designed to be resistant to RF energy in their vicinity. Thus, a perfectly legal amateur-radio transmitter may cause interference to a neighbor's VCR or TV because cost-saving shortcuts were taken in

the design and manufacture of these home entertainment devices. Unfortunately, it is difficult to explain to an irate neighbor why his brand-new \$1000 stereo is receiving the perfectly legitimate transmissions by a nearby radio operator.

The potential for interference to any receiving device is a function of the transmitter power, transmitter frequency, receiver frequency, and most important of all, the proximity of the transmitter to the potential receiver. The transmitted field intensity decreases as the inverse square of the distance. This means that doubling the height of an antenna from 35 to 70 feet will reduce the potential for interference by 75%. Doubling the height again to 140 feet high would reduce the potential another 75%. Higher is better to prevent interference in the first place!

Recently enacted Federal Regulations address the potential for harm to humans because of exposure to electromagnetic fields. Amateur-radio stations rarely have problems in this area, because they use relatively low transmitting power levels and intermittent duty cycles compared to commercial operations, such as TV or FM broadcast stations. Nevertheless, the potential for RF exposure is again directly related to the distance separating the transmitting antenna and the human beings around it. Again, doubling the height will reduce potential exposure by 75%. The higher the antenna, the less there will any potential for significant RF exposure.

### **THE WORLD IS A VERY COMPLICATED PLACE**

It should be pretty clear by now that designing scientifically valid communication systems is an enormously complex subject. The main complications come from the vagaries of the medium itself, the Earth's ionosphere. However, local terrain can considerably complicate the analysis also.

The main points of this paper may be summarized briefly:

**The radiation elevation angle is the key factor determining effective communication distances beyond line-of-sight. Antenna height is the primary variable under control of the station builder, since antenna height affects the angle of radiation.**

**In general, placing an amateur antenna system higher in the air enhances communication capabilities and also reduces chances for electromagnetic interference with neighbors.**