

Edward B. Krachmer  
Senior Regulatory Counsel  
Windstream Services, LLC  
4001 Rodney Parham Road  
MS: 1170-B1F03-53A  
Little Rock, AR 72212

(501) 748-5777  
edward.krachmer@windstream.com

ACCEPTED/FILED

JUL - 7 2015

Federal Communications Commission  
Office of the Secretary



July 7, 2015

**BY HAND DELIVERY**

Marlene H. Dortch  
Office of the Secretary  
Federal Communications Commission  
445 12th Street, S.W.  
Washington, DC 20554

*RE: Letter Accompanying Delivery of Mobile Storage Device by Windstream Corporation (n/k/a Windstream Services, LLC) Regarding Data Collection in WC Docket No. 05-25; RM-10593*

Dear Ms. Dortch:

Windstream Corporation (n/k/a Windstream Services, LLC) (FRN 0014400220) ("Windstream"), on behalf of itself and its subsidiaries, hereby resubmits a portion of its response to the Federal Communications Commission's ("Commission's") data collection in the above-referenced dockets. Specifically, Windstream is resubmitting the data container to correct for errors discovered after it was originally filed.

This letter serves as the document requested by the Commission to accompany hand delivery of mobile storage devices. The following is the information requested by the Commission in its letter dated January 23, 2015 pertaining to original data submissions:

Filer Name: Windstream Corporation (n/k/a Windstream Services, LLC),  
FRN 0014400220

Contact Name:

DiAnne Nichol  
Senior Consultant – Finance  
Windstream Services, LLC  
4001 Rodney Parham Rd.  
MS: 1170-B1F02-12A  
Little Rock, AR 72212  
(501) 748-7489  
v.dianne.nichol@windstream.com

No. of Copies rec'd \_\_\_\_\_  
List ABCDE \_\_\_\_\_

0

Description of Mobile Storage Devices: Two of Apricon Aegis Secure Key 256-bit AES Encrypted USB Flash Drive 4GB, Model No. ASK-256-4GB. These mobile storage devices are PIPS 140-2 Level 3 validated. One has been labeled "Windstream – Original", includes Windstream's FRN, today's date (June 29, 2015), and has a serial number of 004144732782 while the other has been labeled "Windstream – Copy", includes Windstream's FRN, today's date (June 29, 2015), and has a serial number of 004144732801. on both the drive case and the drive, itself. These drives do not require specialized software – merely an eight-digit encryption key, which is being provided per the Commission's instructions. Windstream has made appropriate arrangements for transmittal of the encryption key to Commission staff. A copy of the "Quick Start" manual for the drives is attached hereto.

THE MOBILE STORAGE DEVICES CONTAIN HIGHLY CONFIDENTIAL AND CONFIDENTIAL INFORMATION SUBJECT TO PROTECTIVE ORDERS IN WC DOCKET NO. 05-25 BEFORE THE FEDERAL COMMUNICATIONS COMMISSION AND HAVE BEEN LABELED AS SUCH.

Contents of Mobile Storage Devices (Each Identical):

1. Windstream's Filer Identification Information (identical to previous submission);
2. This letter;
3. Windstream's data container;
4. Windstream's pr.log and qc\_file.log files;
5. A Windstream officer certification pertaining to this resubmission.

Windstream is not resubmitting its redacted and unredacted narrative responses, thus, the original mobile storage devices submitted by Windstream remain relevant as they contain the sole submitted copies of Windstream's unredacted narrative responses.

Windstream is submitting the number of additional copies of this letter requested by the Commission. If you have any questions, please call me at (501) 748-5777. Thank you for your attention to this matter.

Sincerely,



Edward B. Krachmer  
Senior Regulatory Counsel


# Apricorn Aegis Secure Key

## Quick Start Guide

### Introduction

Thank you for purchasing the Apricorn Aegis Secure Key. The Aegis Secure Key works by simply entering your desired 7-15 digit PIN directly onto the onboard keypad. The Aegis Secure Key can then be connected to any USB port on any computer. Should the drive be lost or stolen, the user can rest assured that all data held on the Aegis Secure Key is safe and cannot be accessed by any unauthorized third party.

The full manual is located on the Aegis Secure Key. We recommend that you unlock the Key and download the manual first before making any changes. The manual can also be found at <http://www.apricorn.com/>, then select Aegis Secure key.

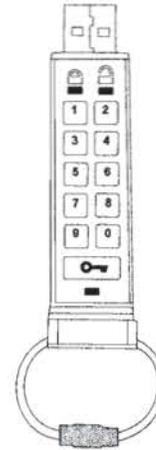

Note: The batteries are not fully charged when you receive your Aegis Secure Key. The battery should be charged prior to first use. Please plug in the Key to a powered USB port for 90 minutes to fully charge your battery.

### Unlocking the Key

1. Press the Key button 	 will blink together
2. Within 10 seconds enter the User PIN (Factory default PIN: 1-1-2-2-3-3-4-4)	 will blink for a correct PIN entry  will blink for an incorrect PIN entry
3. Press the Key button 	 will be on  will be on or blink for activity
4. Connect the Aegis Secure Key to a USB port within 30 seconds	
5. To lock the Aegis Secure Key, Unplug it from the USB port.	

Even though the Aegis Secure Key can be used straight out of the box with the default PIN 1-1-2-2-3-3-4-4, we highly recommend that a new User PIN is configured immediately by following instructions below, for security reasons.

### Changing your PIN code

1. Press the Key button 	 will blink together
2. Within 10 seconds enter the User PIN and press the Key button  (Factory default PIN: 1-1-2-2-3-3-4-4)	 will blink for a correct PIN entry  will blink for an incorrect PIN entry
3. Press and hold the Key button for 3 seconds 	 will be on solid
4. Enter a new PIN number And press the Key button 	 will blink together
6. Re-enter the new PIN number and press the Key button 	 will blink if the new PIN is accepted and The Key is unlocked & ready to use  will blink alternately if the new PIN was not accepted

## Quick Start Guide (continued)

### Resetting your Aegis Secure Key

In case the User PIN has been forgotten, or if you would like to delete all data stored on the Key and configure a new User PIN, follow the instructions below. The reset process will clear all PINs and encryption keys and destroy all data. This means a new User PIN will have to be defined in order to re-enable the Key. Also, since this will force the creation of a new encryption key, the Aegis Secure Key will have to be reformatted.

**Note: By resetting the Aegis Secure Key, all data previously stored on the drive will be lost!**

1. Press the Key button		 will blink together
2. Press the Key button		 will blink
3. Press and hold the Key button and the number 2 button for 3 seconds	 	 will blink together
4. Enter 9 - 9 - 9 and press the Key Button	   	LEDs will turn off
5. Press the Key button		 will be on solid
Note: When the  is on and solid, a new user PIN will need to be set prior to use.		

### Setup new PIN after resetting Aegis Secure Key

Once the drive is reset either by the method above or if the drive was locked by a brute force attack (10 unsuccessful attempts to unlock the Aegis Secure Key), a new user PIN will need to be defined.

1. Press the Key button for 3 seconds		 will be on
2. Within 10 seconds enter the new PIN See the note below about acceptable PIN's		 will be on
3. Press the Key button to save		 will blink together if accepted
4. Re-enter the new PIN number & press the Key button		 will blink if the new PIN is accepted and the Key is unlocked & ready to use
5. If the new PIN was accepted, the Green LED will be flashing. The key will be unlocked and be ready to format.		 will blink alternately if the new PIN was not accepted
Note: PIN's must be between 7-15 digits in length & should not contain repeating numbers e.g. 3-3-3-3-3-3, and also should not contain sequential numbers e.g. (1-2-3-4-5-6-7), (7-8-9-0-1-2-3-4-5-6), (7-6-5-4-3-2-1)		



Apricorn, Inc 2011.  
All rights reserved  
12191 Kirkham Rd  
Poway, CA, U.S.A 92064

### Technical Support

Apricorn provides the following helpful resources for you:

1. Apricorn's Website (<http://www.apricorn.com>)  
This gives you the ability to check for up-to-date information
2. E-mail us at [support@apricorn.com](mailto:support@apricorn.com)
3. Or call the Technical Support Department at **1-800-458-5448**

Apricorn's Technical Support Specialists are available from 8:00 a.m. to 5:00 p.m., Pacific Standard Time Monday through Friday